




Samsung ATIV Smart PC 500T Battery Replacement

This guide will show you how to remove the battery on your Samsung ATIV Smart PC 500T.

Written By: Crystal Dinh

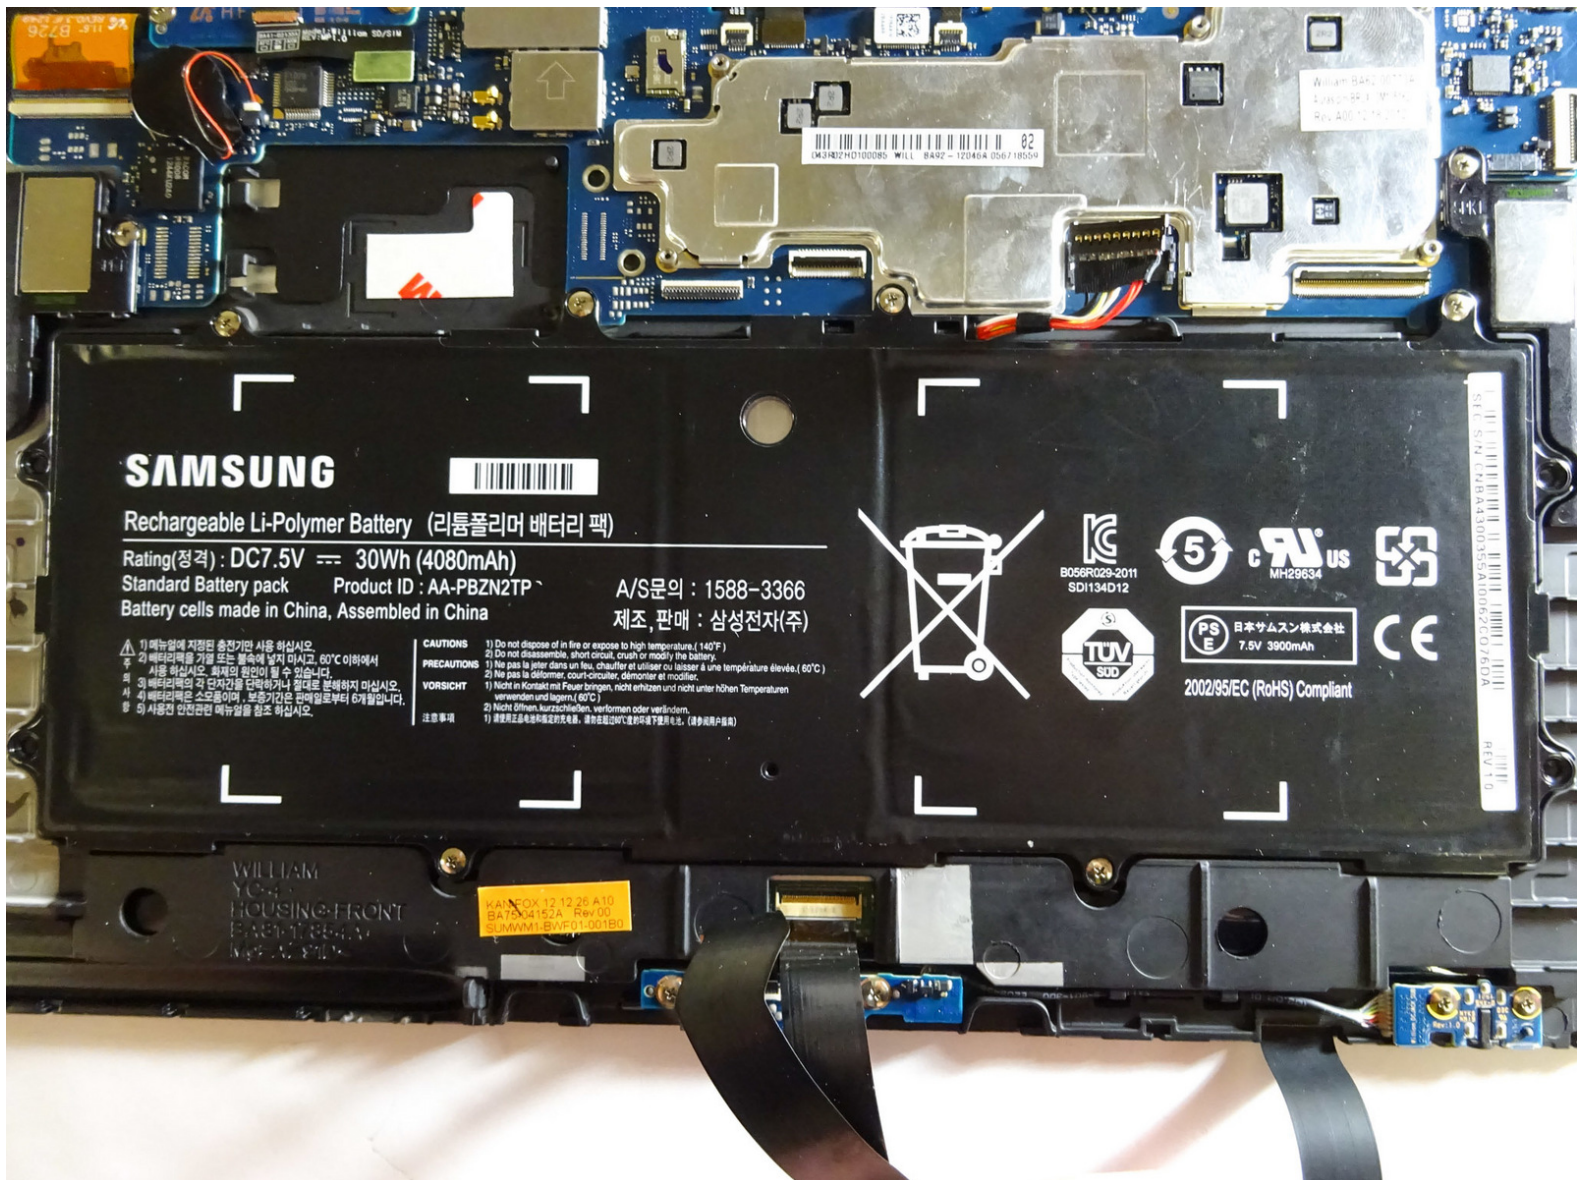

INTRODUCTION

You will be removing the battery from your device. If you haven't done so already, make sure the tablet is completely powered off before continuing.



TOOLS:



- [Phillips #00 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Backplate



- Remove the stylus from the device.
- Place the device screen-up on a hard surface, like a table.


Step 2

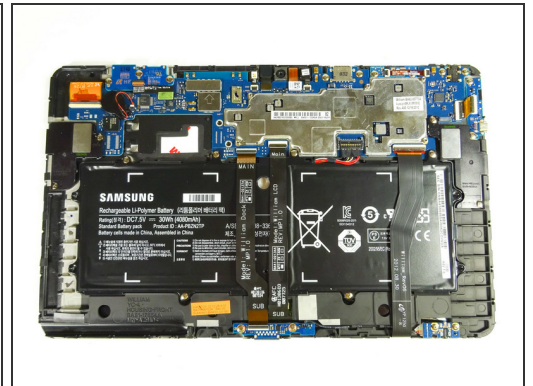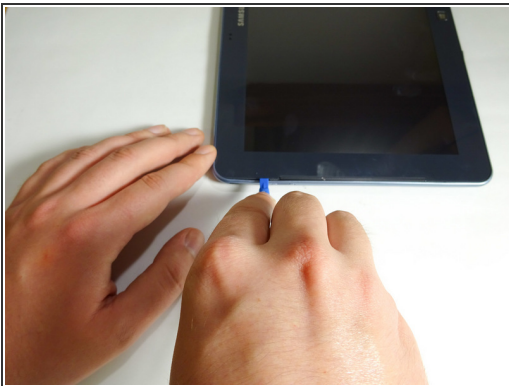

- Insert a plastic pry tool or opening pick between the glass and plastic case.
- Work your way around the plastic edge, unclipping the backplate.
- Once the clips are loosened, remove the backplate. Some force may be necessary.

 Though you may need to use force, be careful of the pry tool slipping and hurting you!

Step 3 — Battery

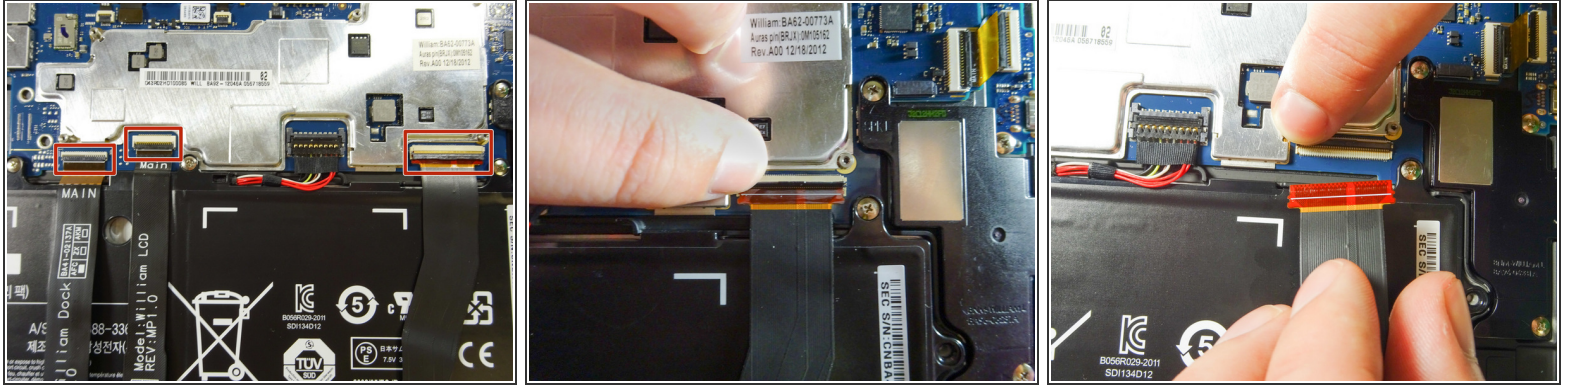

- Disconnect the three ribbon cables from the motherboard to free the battery.
- Use your finger to lift the flap securing each ZIF connector.
- Slide the ribbon cable out and towards you. Now it should be completely detached.
- Repeat with the other two cables.

Step 4



- Get a firm hold of the power cable as close to the clip as you can.
- Pull the power cable up and out of the clip.

Step 5



- Remove the six 3.5-mm screws using the Phillips #00 screwdriver.
- Lift the battery out by hooking your finger under the tab on the top side of the battery and pulling it up and towards you. The battery should come out easily.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 12:04:54 AM.